




The Bankside Guard Seat Installation Guide

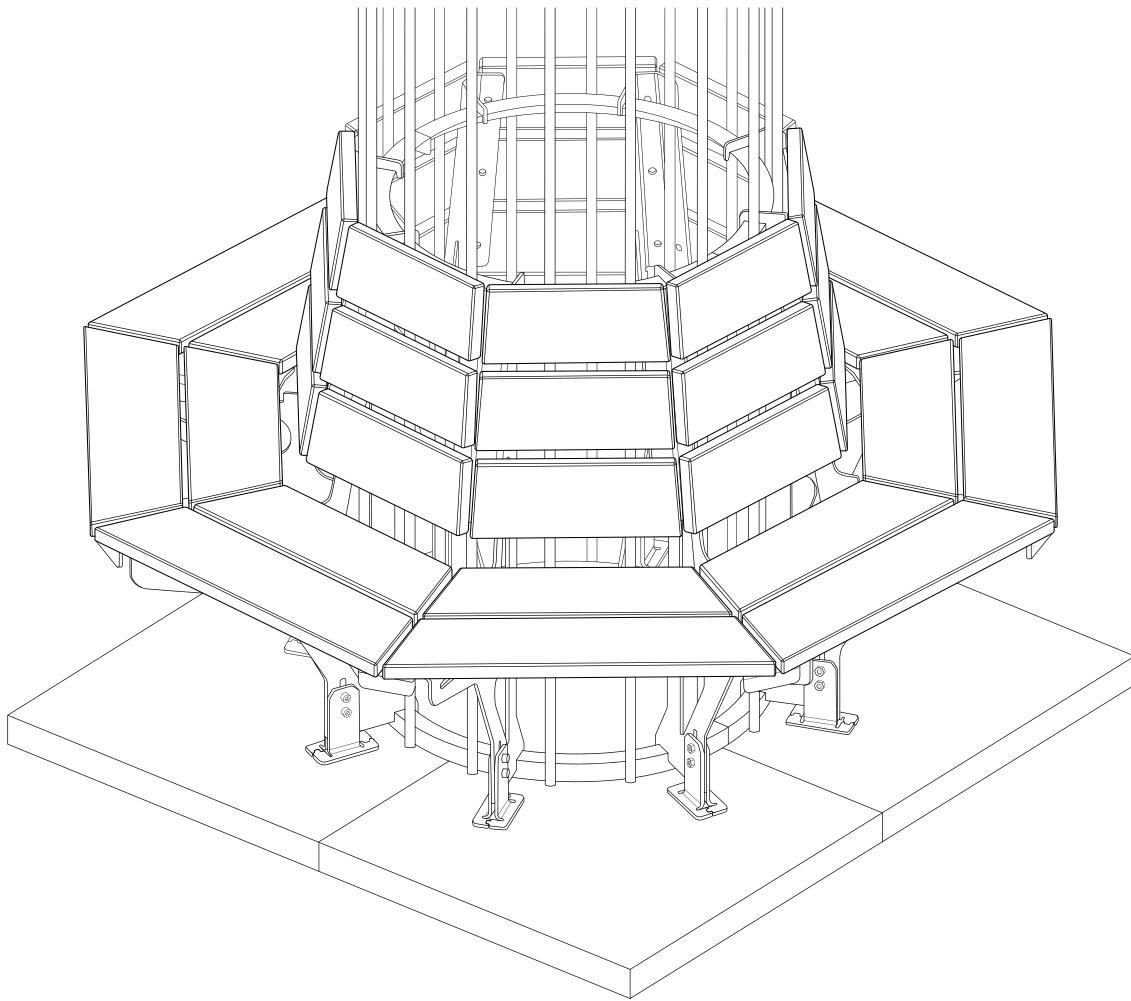


T: 01580 830800
E: enquiries@greenblueurban.com
W: greenblue.com




M8 X 25
Coach Screw
16x




M8 X 25
Socket Cap
Screw 16x

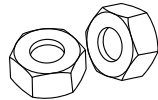


M8 Serrated
Flange Nuts
16x

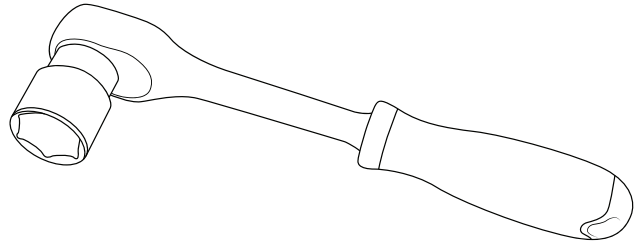


Socket
Wrench

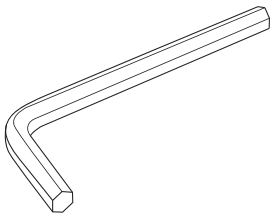

M8 Allen Key

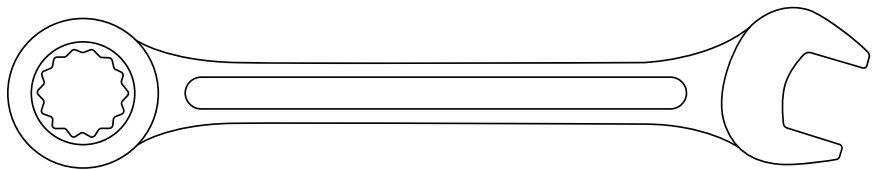

13mm
Spanner

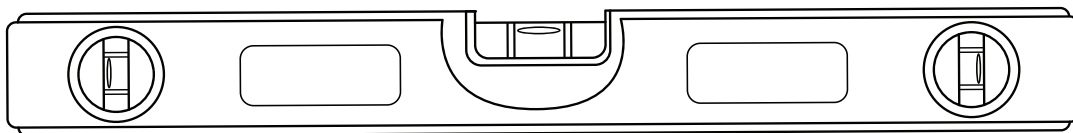


Level




1

Check tree guard is level and straight.


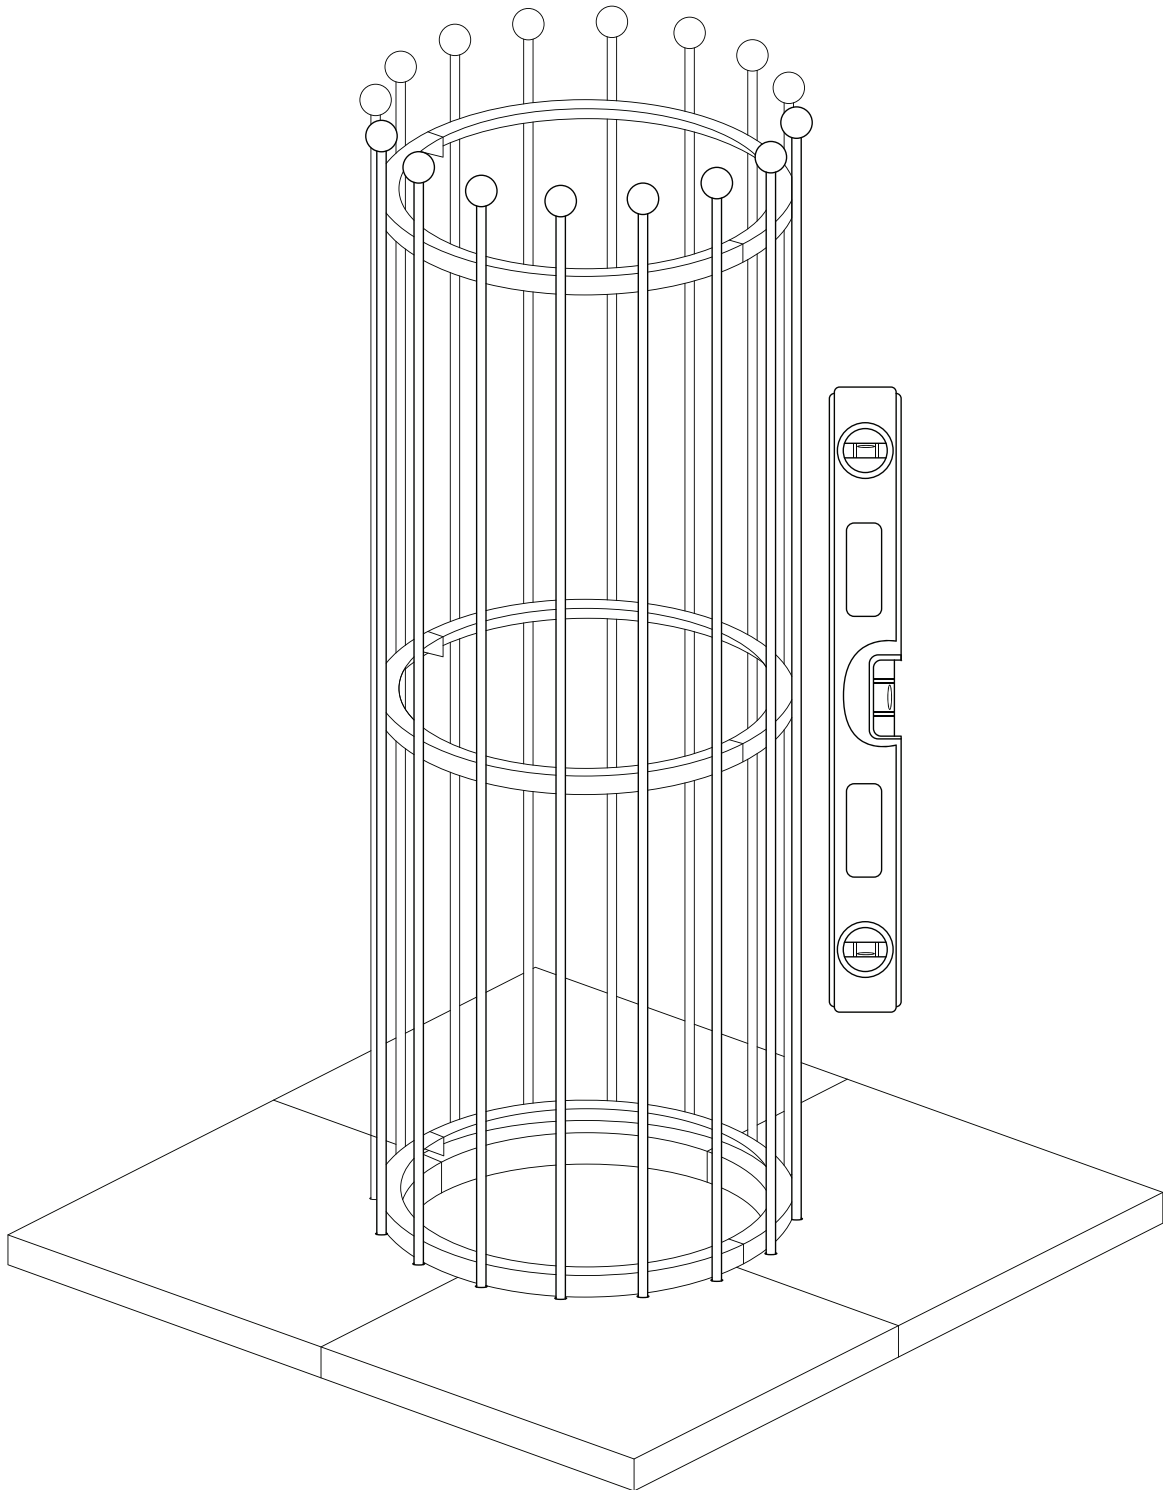


2

Position seat frames around tree guard.

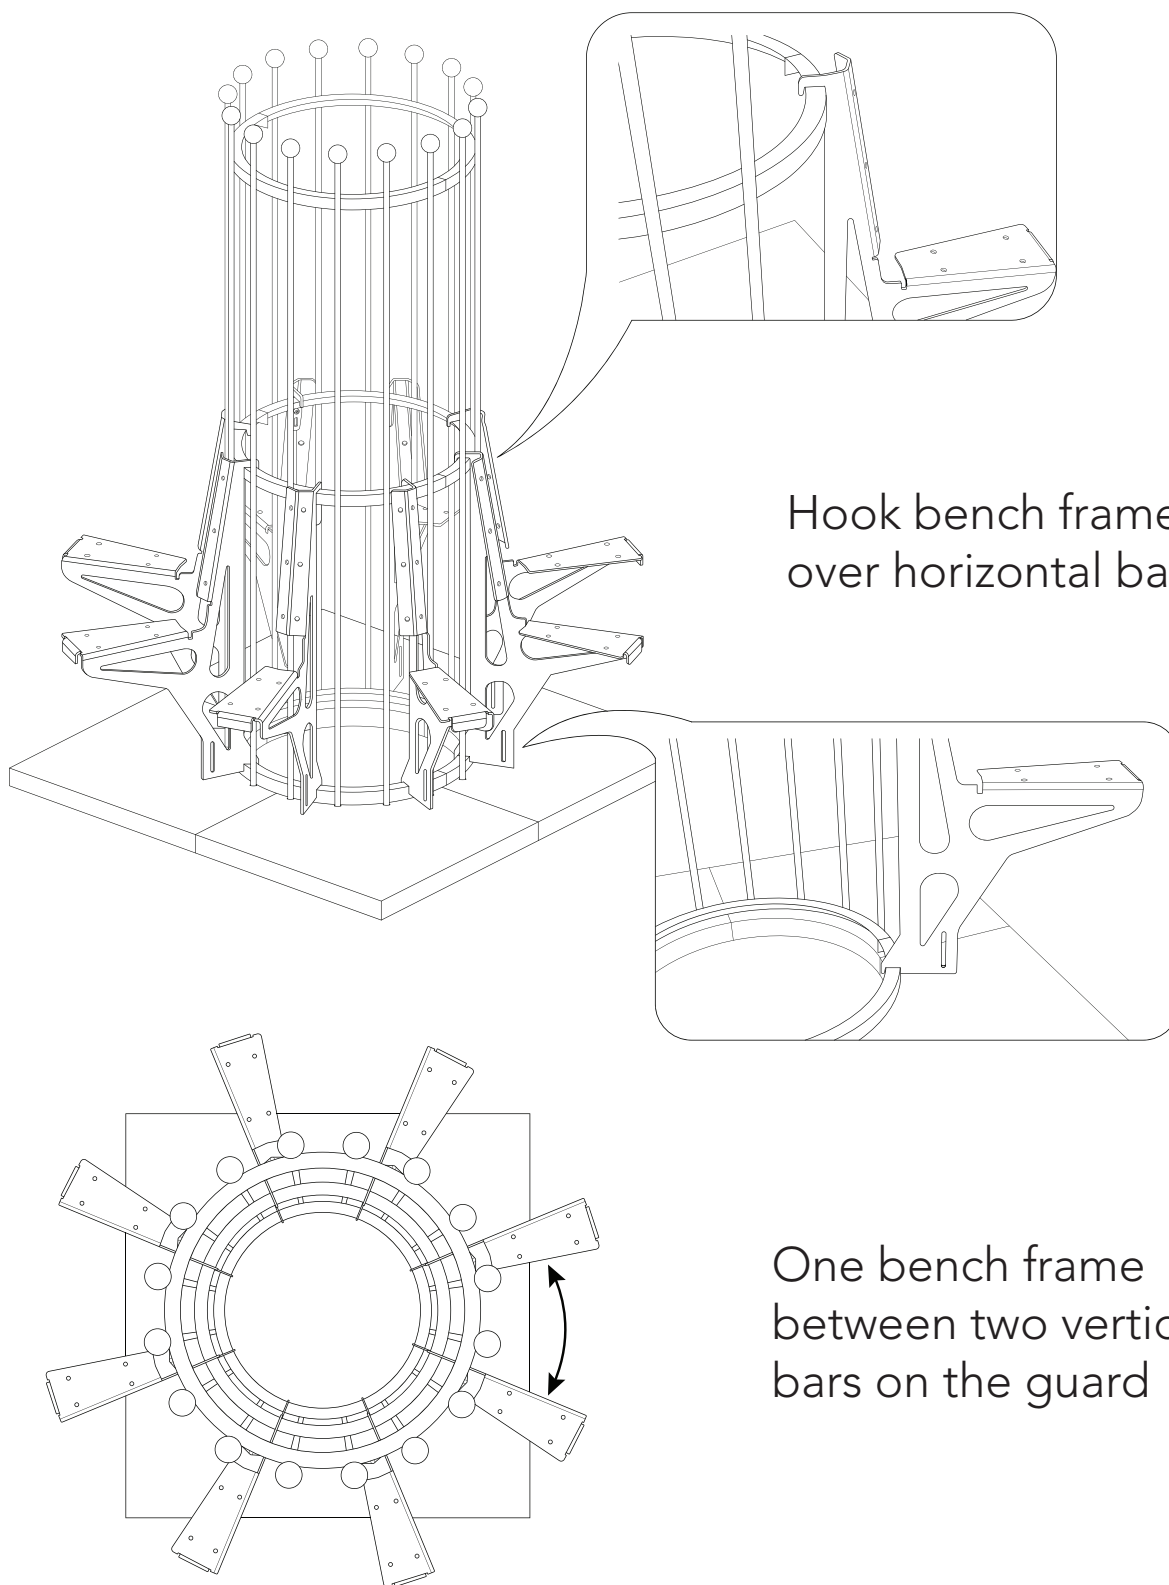





3 Attach and adjust feet.

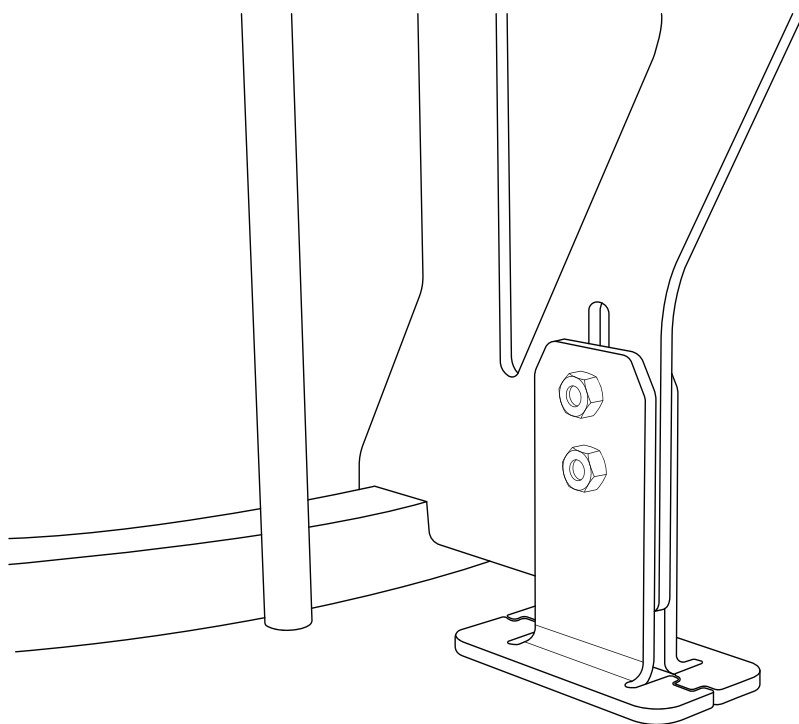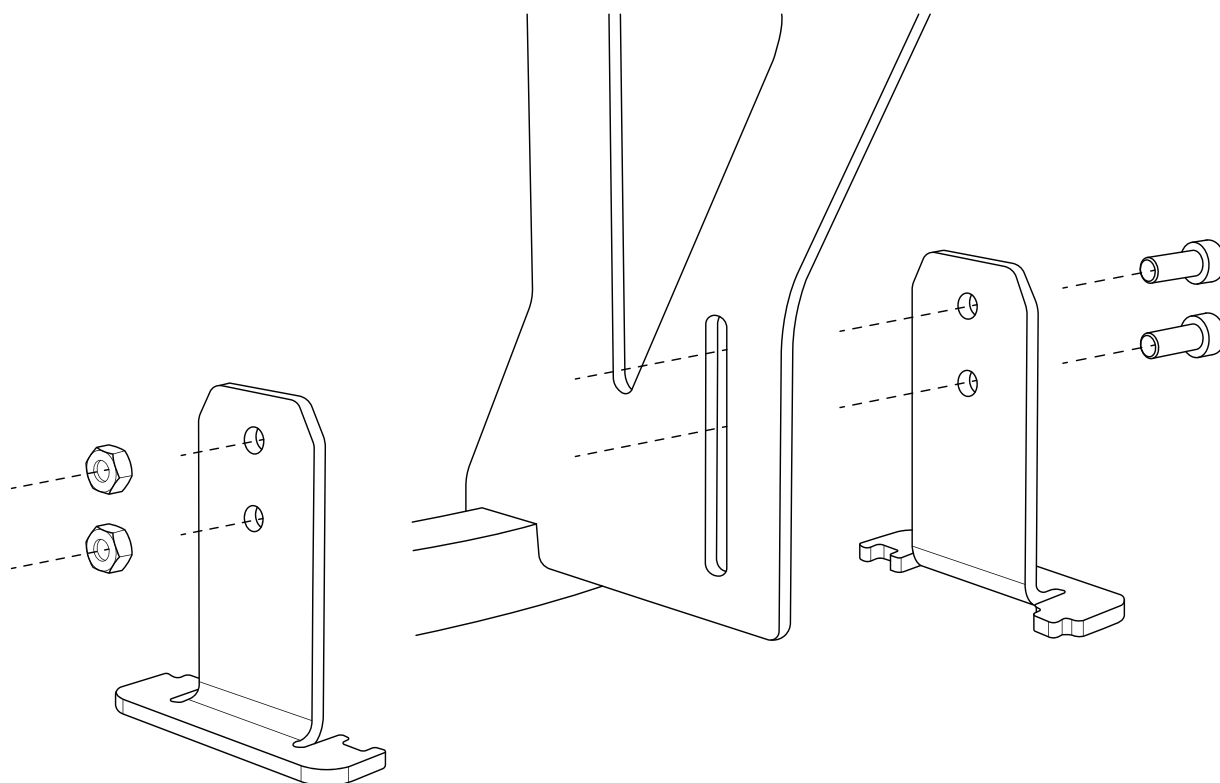

4

Add seat facing in correct order.

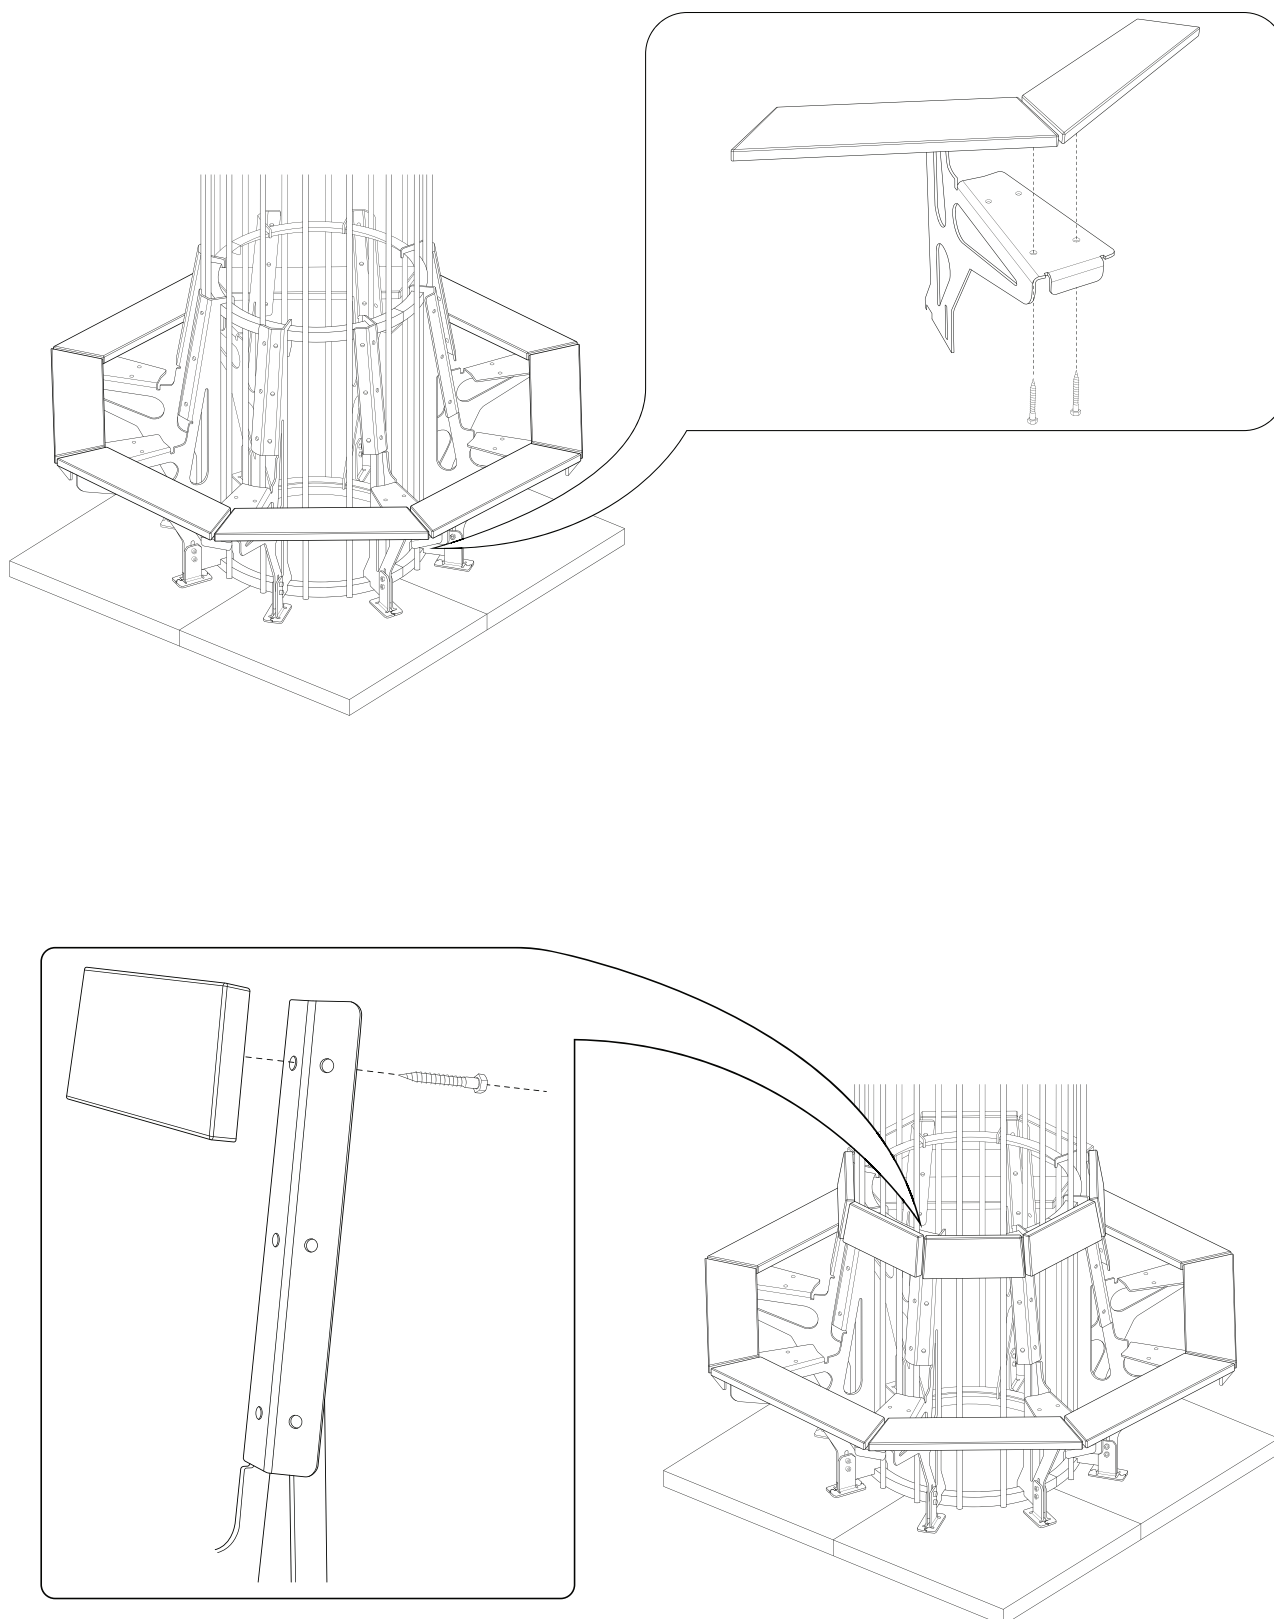

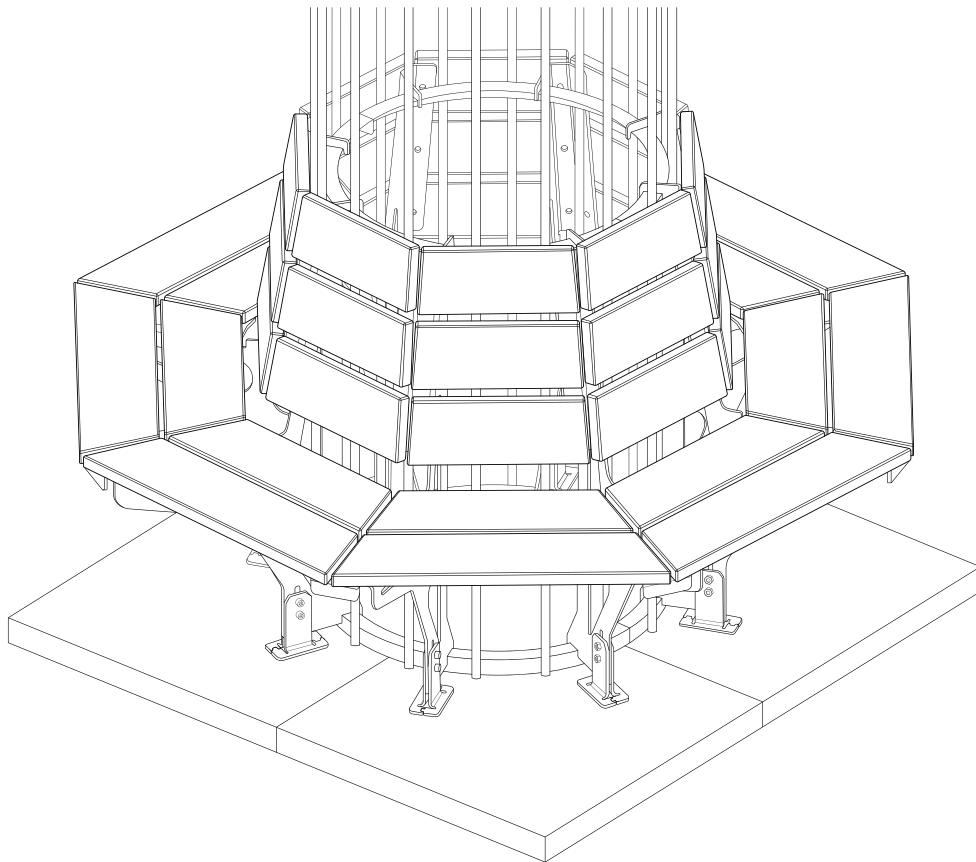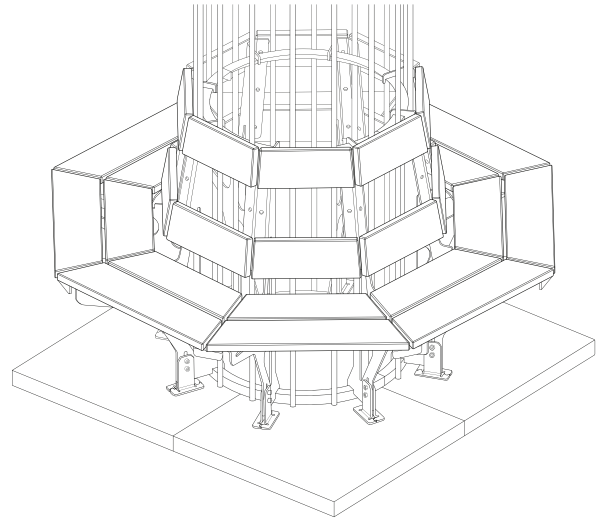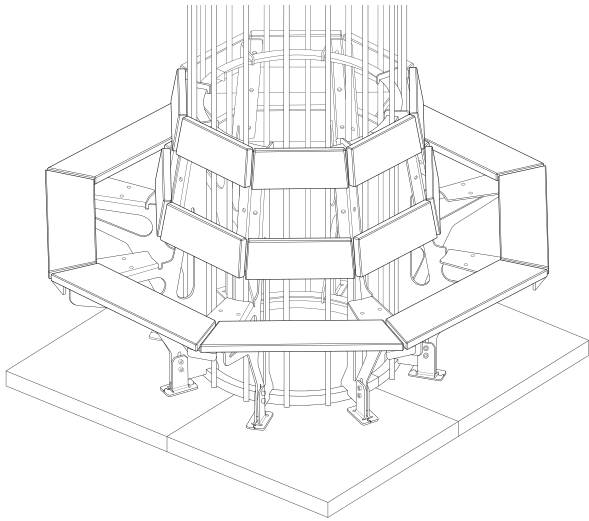

T: 01580 830800
E: enquiries@greenblueurban.com
W: greenblue.com